 


Jet Flame Micro Torch

PIEZO ELECTRONIC IGNITION GAS BURNER


Flame Your Life

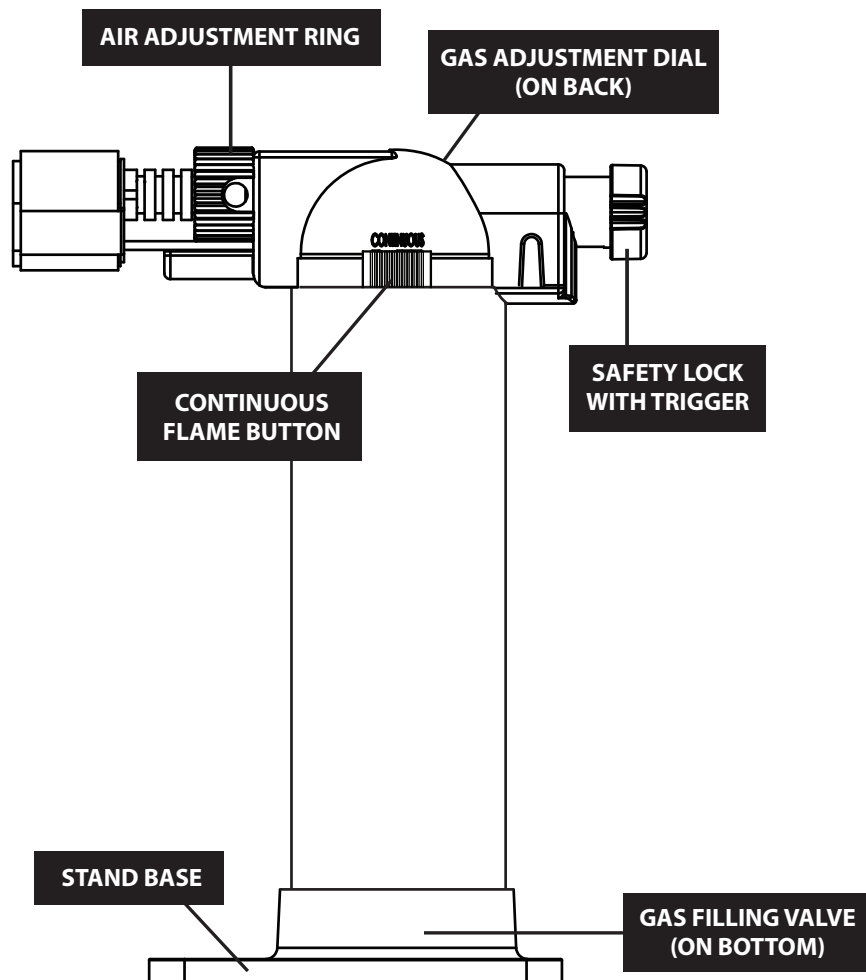

Please read the following operational information before using the micro torch.

IGNITION

- Release the manual safety lock by placing the switch to "on" position,  and the air adjustment must be in open position where the port may be seeing through.
- Press the trigger to ignite the micro torch, and when you release the trigger, the flame will be off.
- For a continuous flame, push the continuous flame button before releasing the trigger.

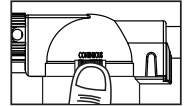

EXTINGUISHING


- For flame off, push the trigger button again, the gas will cut off and extinguish the flame.

HOW TO ADJUST THE FLAME

- Adjust flame by moving the gas volume control lever toward "+" position to increase the flame strength or "-" position to decrease the flame strength.
- Rotate the air adjustment to change the flame type.

REFILLING GAS

- Make sure the fire is fully extinguished, then refill the gas.
- Refill in a well-ventilated area.
- Place the Micro Torch in an upside-down position.
- Insert the nozzle of the butane canister into the torch refilling valve.
- Press down the butane canister into the valve until gas begins to overflow.

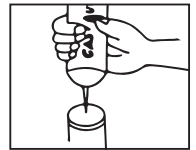

WARNING

- Please read the instruction manual before use.
- Accessible parts may be very hot. Keep young children away from the appliance.
- Always have a fire extinguisher and a bucket of water nearby when operating the torch.
- When operate the torch, please don't point to people.
- Do not use the appliance which is leaking, damaged or which does not operate properly.
- Do not modify or dismantle this appliance.
- Only use cartridges marked 'Butane or butane-propane mixture' complying with EN417.
- The appliance shall be operated on a horizontal surface, unless it is not intended to operate resting on a surface. Store and transport the container upright.
- The appliance shall be used away from flammable materials and information on minimum distances from adjacent surfaces (wall, ceiling) at least 50cm distance,
- When refill the gas or change gas cartridge or gas cylinder, it should be proceed in a well-ventilated location, preferably outside, away from any sources of ignition, such as naked flames, pilots, electric fires and away from other people.
- Flaring may occur during the warm-up period or if the appliance is moved; the warm-up period should not exceed 1 minute.
- If there is a leak on your appliance (smell of gas), take it outside immediately into a well-ventilated flame free location where the leak may be detected and stopped. If you wish to check for leaks on your appliance, do it outside. Do not try to detect leaks using a flame, use soapy water.
- Do not expose to heat above 45°C or prolonged sunlight .
- Do not immerse the unit into water or place in fire or drop to ground.
- Please make sure to turn off gas and wait until it cool down before storage.
- Be aware that the butane flame may be nearly invisible under certain lighting conditions.
- Never attempt to use the torch as a cigarette lighter.
- Contact the retailer before returning the appliance to a repair center.
- Stop refilling once gas starts overflowing.